

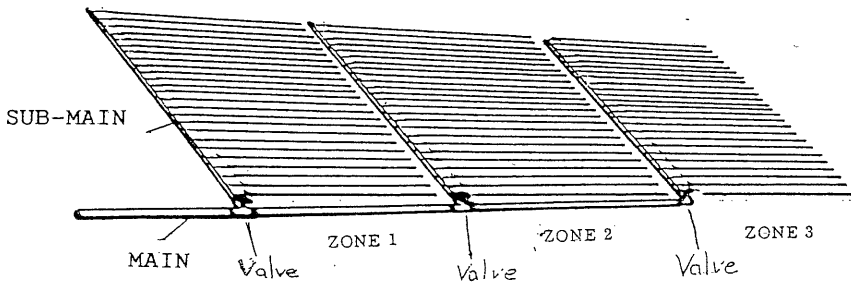
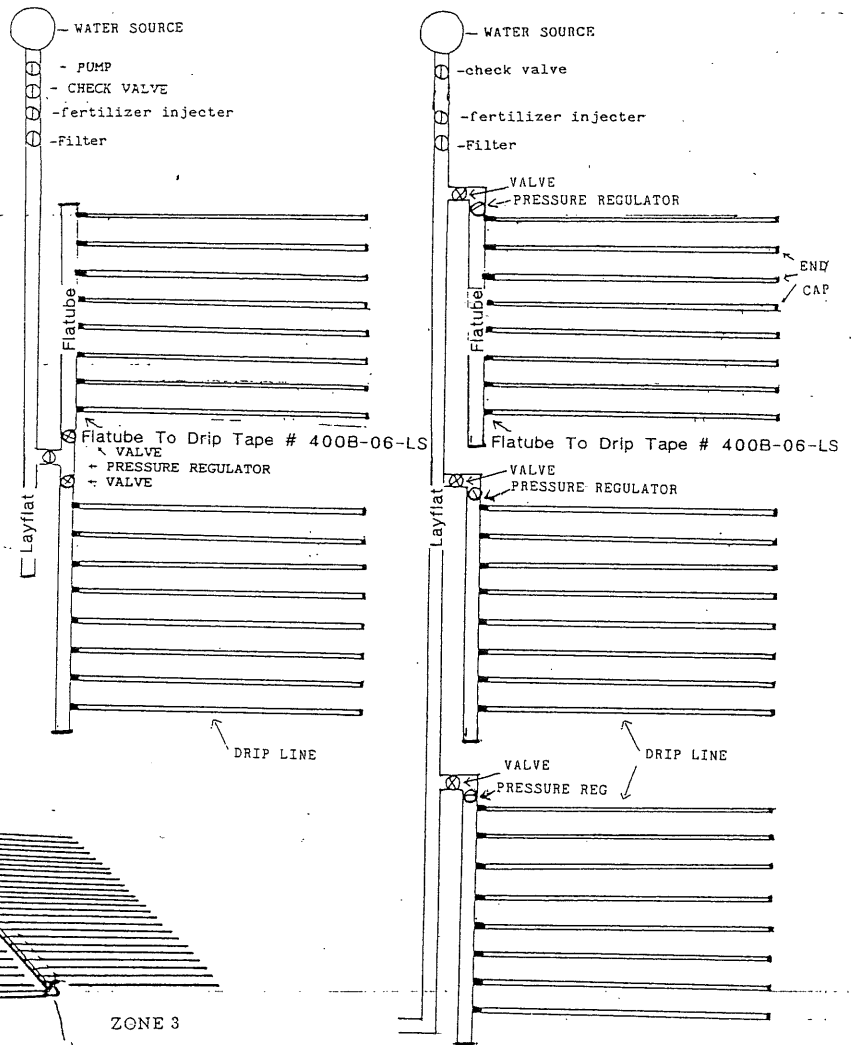


TYPICAL DRIP SYSTEM LAYOUTS

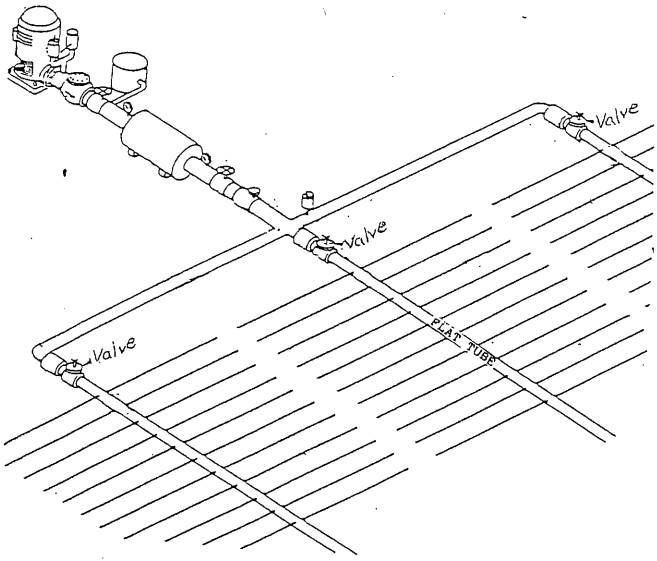

HANDY ELEVATION SCALE. CAN ALSO BE USED FOR WELL DEPTH.

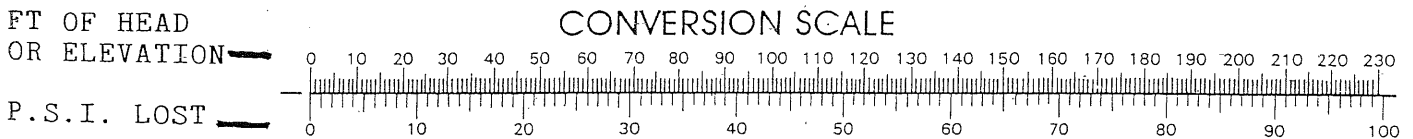

SURFACE WATER CHLORINATION

For best results, systems using surface water should chlorinate their system every two weeks. Inject approx. 1/2 gal. chlorine bleach per acre. Run system about 20 minutes then let set for about 1/2 day before irrigating again.